BANDAI

Ages 6 and up
Asst. #13373

⚠ WARNING:
CHOKING HAZARD - Small parts.
Not for Children under 3 years.

DIGIMON
Digital Monsters

D-POWER DIGIVICE INSTRUCTIONS

Table of Contents

WHAT IS A D-POWER DIGIVICE – PAGE 1-3

- Digital World
- Digimon Attack Types
- Digi-Modify (Card Swiper)

SETUP – PAGE 4

- How to install batteries

SOUND, LCD AND RESET– PAGE 5

- Sound
- LCD screen button
- Reset operation

PREPARING FOR YOUR ADVENTURE – PAGE 6

- Selecting your Digimon Partner

DIGI-COMMANDS – PAGE 7-10

- Status
- Map
- Game
- Medical
- Change
- V.S. Battle
- Internet

WALKING WITH YOUR DIGIMON – PAGE 11

- Walking status
- Distance
- Steps
- D-Energy

EVENTS WHILE WALKING – PAGE 12-15

- Discovered Digi-Items
- Teaming up with other Digi-Pals
- Digi-Battle
    - Digi-Attack
    - Digi-Item
    - Digi-Change
    - Digi-Escape
- Impmon Event

ONLINE BATTLE GAME – PAGE 16-23

- Installation
- Online registration
- Game commands
- Save and retrieve
- Send a message
- Training hall

FAQ - PAGE 24-26

What is a D-Power Digivice?

WHAT IS THE D-POWER DIGIVICE?

The D-Power is the newest Digivice used by the Digi-Destines in the new Season 3 Television show. The Digi-Destines use their D-Powers to help them Digivolve their Digimon into fiercer monsters to help them defeat the Evil Digimon.

You have been chosen to help your D-Power Digimon travel through the Digital World battling Evil Digimon's on your adventure. Your mission is to complete all the maps and be transported to the final secret area where the ultimate boss awaits your arrival.

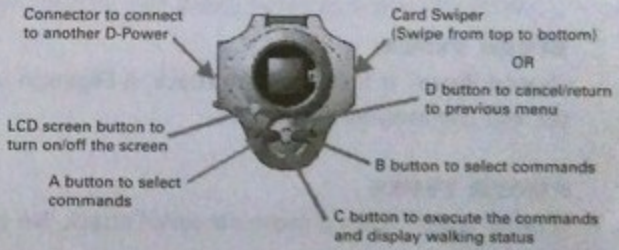
Connector to connect to another D-Power
Card Swiper (Swipe from top to bottom)
OR
D button to cancel/return to previous menu
LCD screen button to turn on/off the screen
B button to select commands
A button to select commands
C button to execute the commands and display walking status

Digital World

The Digital World within your D-Power consists of 5 maps containing 13 different areas. The areas are divided up as follows:

Map 1 – Rookie Level Areas 1 – 3
Map 2 – Champion Level Areas 4 – 6
Map 3 – Ultimate Level Areas 7 – 9
Map 4 – Mega Level Areas 10 – 12
Map 5 – Mega Level Area 13 (The Final Secret Area)

As you complete each Map, you will be automatically Digivolved to the next level of power.

Digimon Attack Types (Sniper, Speed, Power)
Each Digimon has 3 attack types. The points/powers for these types will change depending on your battle history with the Evil Digimons you have encountered on your adventure.

SNIPER TYPES
"Sniper Types" is for a more Precise and accurate attack. Evil Digimon will have a tough time dodging this Digimon's attack.

SPEED TYPES
"Speed Types" is for a quicker attack. A Digimon using speed type will usually attack first and take the evil Digimon by surprise.

POWER TYPES
"Power Types" is for a more powerful attack. No matter what evil Digimon attacks, you will have the power!

Tip 1 Every Digimon has one type that's weaker than the others. Guess the Evil Digimon's weak type correctly and you will surely win the battle.

DIGI-MODIFY(Card Swiping Action)
Add a more powerful attack to your Digimon by swiping a Digi-Card through your D-Power's card swiper. The speed of the swipe, will determine your attack type (sniper, speed, or power) for each battle that you encounter.

Battle History
Your attack types will also be affected by your battle history. The attack types that you use most often, will be your most powerful attack.

Tip 2 Strategically you can build your Digimon to be more powerful in one type of attack. This can help you on your Digi-Adventures defeating the Evil Digimon.

Set Up

How to install batteries

The D-POWER requires 2 "AAA" batteries. Using a small screwdriver, turn the screw counter clockwise to loosen. Pull the battery cover up as shown, and insert fresh batteries as indicated in the illustration.

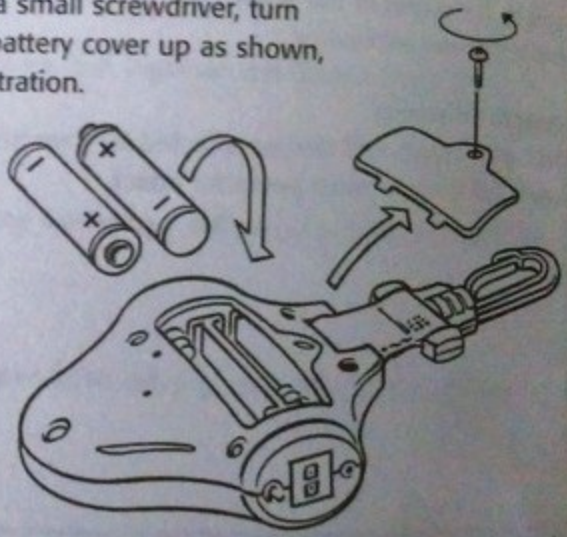

CAUTION : Keep batteries away from children. Batteries may be harmful if swallowed. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Do not mix new and old batteries.

Sound & LCD & Reset

Sound

While on your Digimon screen, press the A and C buttons at the same time. Press the A or B button to switch sound On(B) or OFF (A). To select press the C button.
NOTE: You will not hear the enemies alert beep if the sound is Off.

LCD Screen Button

The D-POWER has an Auto Off function, which will turn the LCD screen off automatically if no buttons are being pressed within a one minute time frame. The pedometer will still measure your walking distance during the Auto Off function. The LCD screen will turn back on when you encounter an evil Digimon or when you come across an event while walking, or by pressing the LCD button.

Reset Operation

Gently press the reset button on the back of the D-Power with a thin object when:
- commands are not working or nothing appears on the screen
- using your D-Power for the first time or after batteries have been changed
- you want to start the game over from the very beginning

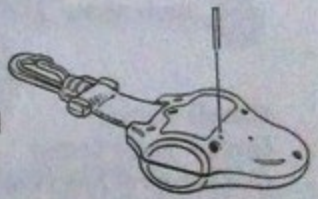

CAUTION: Pressing the reset button too hard may damage your D-Power.
DO NOT press the reset button unless necessary, as the reset button will erase all records of your previous Digi-Play.

Preparing for your Adventure

Selecting your Digimon partner

After you place new batteries in your D-Power and gently press the reset button the opening animation will begin.

1. Press the C button to show the selection screens.
2. Press the A or B button to scroll through the Digimon choices.
3. Press the C button to select a Digimon.
   You can select from the following season 3 Digimons:

Digimon Partners

GUILMON

(Level) Rookie
(Attack Type) Sniper
(Parameters) *Life Point 6*
Power Point 70
Speed Point 40
Sniper Point 90

RENAMON

(Level) Rookie
(Attack Type) Speed
(Parameters) *Life Point 5*
Power Point 50
Speed Point 90
Sniper Point 60

TERRIERMON

(Level) Rookie
(Attack Type) Power
(Parameters) *Life Point 6*
Power Point 90
Speed Point 50
Sniper Point 60

Digi-Commands

There are seven important Digi-Commands that will help you on your Digi-Adventure including: STATUS, MAP, GAME, MEDICAL, CHANGE, V.S. BATTLE, and INTERNET. The following is a description of each of these commands and what they are used for.

STATUS **Follow the steps below to check the status of the Digimon's that are currently traveling with you on your adventure.**

1. From the main screen press your A or B button to select your status command.
2. Press the C button to select.
3. Press your A or B button to switch Digimons. *Press the C button to select.
4. Press your A or B button to switch to a different Digivolving level of that Digimon that you've selected. *Press the C button to select.
5. You can now review that Digimon's status by pressing your A or B buttons to scroll through the Digi-Information.
6. Press the C button to go back to the main screen.

* You may not have any Digimons to switch with if you haven't met up with any on your adventure (See page 12 Digi-Pals or page 10 CHANGE command for additional information on teaming up with another Digimon). Additionally, you may not be able to Digivolve to another level if you haven't cleared any maps.

MAP **Look at the Map/Area that you are currently in and/or change the Map/Area you wish to Digi-Play.**

1. Press your A or B buttons to scroll to the Map screen. Press your C button to select.

2. Press your A or B buttons to scroll through the Maps. (**NOTE:** it will only scroll through the Maps that you've journeyed to thus far. A solid circle indicates the areas you've cleared and the open circles are the areas you haven't. The blinking cursor is the area that you are currently in.) Press the C button to select a map.

3. Press your A or B buttons again to select the area you wish to play within the map you've just selected. Press the C button to Select.

NOTE: If you have selected a map less than your current position, you will automatically Digivolve back to that lower level.

GAME **Have some Digi-Fun and Gain Distance points!**

1. Press your A or B button to scroll to the Game screen. Press your C button to select.
2. Press your A or B button and press your C button to select from Digi-Hunter or the Digi-Catch Game.

Digi-Catch

1. Press your A or B buttons to move the catcher from side to side.
2. Lower the catcher arm with the C button, capturing as many Digi's as you can.
3. When the game is over, press the C or D button to indicate your score.

NOTE: Your Distance will decrease according to your score.

Digi-Hunter

1. Press the A button to move the left side cursor and the B button to move the top cursor.
2. Line up both cursors with the Digi-Bugs and press the C button to fire. When a large Digi-Bug appears, line up your cursors and press the C button repeatedly until you've destroyed him.

3. When the game is over, press your C or D button to show your score.
4. Your Distance will decrease according to your score.

MEDICAL **If your Digimon has been wounded in battle you are able to cure him.**

1. Press your A or B button to scroll to the Medical screen. Press your C button to select and cure your Digimon.

NOTE: Your Digimon will need to be cured or your steps from that point forward will not be counted.

CHANGE **Switching to another Digimon.**

1. Press your A or B button to scroll to the Change command. Press your C button to select.
2. Press the A or B button to scroll through your selection of Digi-Pal's. Press the C button to select the Digimon you want to switch with.
3. Press the A or B button to scroll through your selection of Digivolving levels. Press the C button to select the level you want to play in.

NOTE: You can only change with another Digimon if you've met up with one on your journey and you can only Digivolve if you've cleared that digivolving map.

V.S. BATTLE **Connect with a friend's D-Power for head to head battles.**

1. Press your A or B button to scroll to the V.S. Battle command. Press your C button to select.
2. If you want you can change your Digimon or Digivolving level before you battle your friend. (See above for CHANGE Instructions)

3. After you've selected your Digimon, you can swipe a card (standard or D-Energy) or press the C button for normal battle play. Connect your D-Power to another D-Power and press the C button to execute. Keep the connection until you hear a long beeping sound and the Attack types indicator appears. Disconnect the D-Powers and watch as your Digimon's battle each other.
4. Your battle result will appear when the battle is over.

NOTE: If an error message appears repeat steps 1-3.

INTERNET **To download and battle your friends via the internet see page 16 for details.**

Walking with your Digimon

After you have selected a Digimon to Travel with, you may take him with you wherever you go. Attach the D-Power to your belt and your Digimon will walk with you counting ever step you take.

Walking Status

From the main screen press the C button to view your Distance, Steps, D-Energy and Distance. Press the D button to go back to the main screen.

Distance

Tells you how many steps are still needed to clear the current area you are in. Your distance will be affected by the battles that you win or lose. It will also be affected negatively if you ignore a beeping sound.

Steps

Tells you how many total steps your Digimon has taken.

D-Energy

Tells you how much D-Energy your Digimon has earned. Every 100 steps taken by your Digimon will earn 1 D-Energy point. D-Energy allows you to battle at a more powerful level when facing an enemy. If you have the D-Energy points to battle, choose the D-Energy screen and swipe your card. You now will battle at a more enhanced level of power.

Events While Walking

As you walk with your Digimon on your Digi-Adventure, you will hear beeps periodically alarming you of a Discovered ITEM, teaming up with other Digi-Pals or an ensuing BATTLE.

1. Discovered Digi-ITEM

As you walk you may discover a Digi-ITEM on your Digi-Adventure. When the Digi-ITEM screen appears, press the A button repeatedly until you break open the PC monitor pixel and your item falls. You can store up to 3 Digi-ITEM's of the same kind in your item bank. These items will give you the opportunity to battle in that Digi-Attack Types without having to swipe a card. The following is a list of the four Digi-ITEMS: Sniper Digi-ITEM, Speed Digi-ITEM, Power Digi-ITEM, and Life Digi-ITEM.

2. Teaming up with other Digi-Pals

You will meet other Digimon's on your Adventure that will partner up with you and continue to travel with you on your adventure.

Tip 3 When you team up with another Digimon, you can switch with him/her at any time. Strategically when you encounter a battle you may want to switch with a Digimon that's better able to battle that particular enemy. (See Digi-CHANGE Command – Page 14)

3. Digi-BATTLE

While walking with your Digimon you will come across Enemy Digimon who want to battle with your Digimon. If your Digimon is ready for battle, the enemy Digimon will approach. Press A, B, or the C button to choose from your Digi-Commands described below.

Digi-ATTACK

Choose the Attack Menu before you battle to determine what kind of attack method you will use on your enemy. The Swipe a Card screen will appear. Swipe a Digi-Card and see what Digi-Attack has been selected . If you decide not to swipe or swipe incorrectly*, your D-Power will automatically battle a normal attack after 15 seconds. You may also change to the D-Energy screen where you can swipe a card and battle with a more powerful D-Energy attack. D-Energy is consumed differently by the different digivolving level you are currently battling in: Rookie – 16 D-Energy, Champion – 24 D-Energy, Ultimate – 32 D-Energy, Mega – 48 D-Energy.

* Be sure to swipe from top to bottom touching the inside detector every time.

Tip 4 Strategically when you swipe, your goal is to get the Attack Type that your Digimon is the strongest in. This will allow you to battle at a stronger level of power.

Digi-ITEM

Choose one of your Digi-Items that you have collected for this battle. When you select an item, you CANNOT swipe a card for the same turn.

Digi-CHANGE

Choose to change your Digimon with one of your Digi-Pals that has teamed up with you on your Digi-Adventure. Press the A or B button to make the switch and press the C button to select. You may then select from one of your battle commands – Digi-ATTACK, Digi-ITEM or Digi-ESCAPE.

NOTE: To prolong your life during a battle you may switch with each of your Digi-Pals once.

Digi-ESCAPE

You may choose to escape the battle if you feel unprepared. Just be careful, there's a chance that your escape could fail.

BATTLE END

When either your Digimon's Life points or your enemies points go down to zero the battle is over. The battle will also end if you choose to escape.

WIN THE BATTLE

When you win a battle all your status points will reflect that victory.

LOSE THE BATTLE

If you lose a battle you will gain 500 more steps to your distance as penalty to your defeat. You may also find yourself injured in which you need to follow the steps on how to MEDICAL your Digimon.

BATTLE AGAINST THE AREA BOSS

When you have walked all the distance needed to clear that particular area, the Digimon Boss will appear. You must battle and defeat him in order to proceed to the next area.

4. Impmon Event

If you lose a battle or ignore the beeping sounds three times or more then Impmon may appear and take one of your Digi-Pals away.

NOTE: The only time Impmon will take a Digi-Pal away is when you have all 3 Digimon team members currently with you.

Online Battle Game

Now that you have trained & traveled with your D-Power Digimon, you may take him on the internet and battle with your friends all over the world. The D-Power Digivice with Maxverse technology allows you to enter the Digital World for real live CGI animation. Before connecting to the Digital World, consult with your parents, read the agreement and install the software following the below instructions.

Installation

1. Insert CD Rom into your CD Rom drive on your PC.
2. The program should be automatically launched by Windows auto run. However, if it doesn't then double click the CD Rom icon in the Windows Explorer and select setup.exe to launch the program
3. Follow the on screen instructions to load.
4. The shortcut icon and program will be automatically stored in your hard drive. (Click the Digimo icon to launch the program.)

NOTE: Each D-Power Digivice comes with its own unique serial number. In order to register two D-Powers on the same PC, you must repeat the installation instructions & register with the new user's information. While installing and registering the program, we highly recommend having your parent's supervision.

Online Registration (www.maxverse.com)

Online registration is required in order to use the online battling of the D-Power. The following information is required in order to register and login for online battle.

1. User name (6-14 characters, alphanumeric)
2. Password (8 characters, alphanumeric)
3. Serial number (see page 29)

NOTE: Be sure to write and store your password in a safe place so you don't forget it.

From the Digital World Map you may select from the following menu commands: Main, Upload, Download, Digimon Dictionary, Online Battle, Save, Retrieve and Quit.

Your uploaded Digimon will be displayed in the upper left hand corner of the Digital World Map. You can click on him to display his stats.

The areas that are colored in, tell you the areas that are accessible to you. This is determined by what areas you have cleared in your hand held D-Power Digivice. (**NOTE:** You can not advance to another area on your PC without clearing it in your D-Power Digivice first.)

MAIN

Click on the main menu icon to return to the Digital World Map screen at any time. The main menu will display the Digital World Map and your uploaded Digimon.

UPLOAD / DOWNLOAD

You can upload your Digimon from your hand held D-Power to your PC or download your Digimon from your PC back into your D-Power. Simply plug in your 9 pin serial cable into your computer inlet and plug in your D-Power connection into the top part of your D-Power. Follow the instructions below to finish the process.

1. Press your A or B button to scroll to the INTERNET command on your D-Power Digivice. Select it by pressing the C button to show "READY" on the LCD screen.
2. Click your upload (download) button from your PC's Digital World Map.
3. Your Digimon will magically transfer from your D-Power Digivice to the Digital World on your PC. (Downloading will move your Digimon from your PC back into your D-Power Digivice.)

NOTE : On your D-Power Digivice the screen will say OK when the transmission has been completed properly. If your Digimon does not appear on the screen check your connection and repeat steps 1-3.

DIGIMON DICTIONARY

You don't need to be online to access all 370 Digimons' information.

1. Click the Digimon Dictionary icon on your PC's Digital World Map.
2. Scroll through the list of Digimon and choose the one you want by clicking on his name or number.
3. When clicking on the Digimon of your choice, his/her Digi-stats will appear on the screen.

NOTE: The Digimons may be sorted by Digi-ID number or in alphabetical order when you press the DIGIMON ID or NAME at the top of column.

ONLINE BATTLE

Once you've uploaded your Digimon successfully you are able to battle your friends via the internet. Follow the instructions below to begin battling:

1. Click on your Online Battle Icon on your Digital World Map.
2. This will automatically access into the Maxverse.com login page. Enter your user name and password to login. After login successfully, close the browser.
3. The Digital World Map will appear on the screen with your online stats in the bottom right hand corner.
4. You may choose from any of the colored areas to battle against another person online.

NOTE: Online registration is required in order to battle online. (see page 16 for details)

Field Area

When you click on an area on your Digital World Map, the field area will appear. Click on the Field Area you wish to move your Tamer icon to.

NOTE : The area you choose will determine the digivolving level you are currently in. If you choose an area that's less than your highest level then you will automatically digivolve down to the level that you have selected.

Tamer's information

You can meet up with, message to, or battle with the other Digimon Tamers currently online. Click on the Digimon Tamer of your choice, and his/her battle history and message screen will appear. You can decide if you'd like to battle or just send him/her a message.

MESSAGE Click the MESSAGE button in order to send a message to the Digimon Tamer that you have currently selected. Your message will automatically be rejected if that Tamer does not respond within 30 seconds.

BATTLE Click the BATTLE button to send out a battle challenge to the Digimon Tamer that you have selected. The Digimon Tamer can then decide to accept or reject your challenge. The battle will start immediately if the Tamer accepts the challenge.

Final Secret Area 13 (Final battle with MaloMyotismon)

When you have cleared all the maps on your D-Power you can move to the final area 13. You must beat the D-Power MaloMyotismon before you can advance to the final area 13 on your PC. When you have cleared area 13 on your hand held D-Power Digivice then the Digital gate in the bottom right hand corner of your online final area 13 will show that you have access that area.

Training Hall

Without going online you may practice with your Digimon in the Training Hall of your PC.

1. Click on the "Training Hall" map which is located in the bottom left hand corner of your Digital World Map.
2. Select a Digimon that you would like to battle against.
3. After you have made your selection, the battle will automatically begin.

NOTE : You may only choose the same Digivolving level Digimon, or a lower level Digimon that you have cleared on your D-Power Digivice.

SAVE / RETRIEVE

You can save (or retrieve) your Digi-Adventure data to(or from) your PC's hard drive. In order to save the data on your PC, you must upload your Digimon following the instructions on page 18. When you have uploaded successfully, press the save button on your Digital World Map on your PC. Confirm the data that you wish to save is correct and click the yes button.

QUIT

To confirm that you leave the program successfully, click on the Quit button on your Digital World Map.

CONTROLLER :

Keyboard	Action
→ key or "6" key	Move forward (Go backward for right player)
← key or "4" key	Move backward (Go forward for right player), Defend
↑ key or "8" key	Jump
↓ key or "2" key	Duck Down
"S" key	Digi-Technique (Every Digimon has a special technique)
"A" key	Punch
"W" key	Firing Attack (If available)
"Z" key	Kick
"Esc"	Surrender

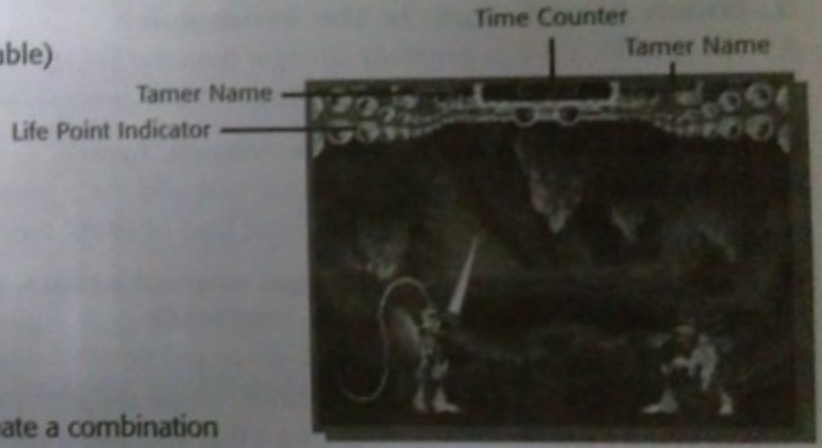

NOTE : Pushing more than 2 buttons may create a combination action. (i.e. ↑ + Z keys gives you Jump kick.)

FAQ

Q. What must I do to clear an area?

A. Each area has a distance step requirement you must complete in order to advance to the next level. As you travel on your adventure, train your Digimon by battling the Evil Digimon that you come across. By battling the Evil Digimon, you will prepare yourself for the final Digimon Boss at the end of each area. You must defeat the area boss before you can advance to the next level.

Q. Which Attack Type is the strongest?

A. The SNIPER TYPE is generally stronger than the SPEED TYPE, the SPEED TYPE is generally stronger than the POWER TYPE and the POWER TYPE is generally stronger than the SNIPER TYPE.

Q. How do I know an enemy's Attack Type?

A. Enemy Digimon only have one attack type and that's what he/she will attack with. As you battle each Evil Digimon you can guess what kind of attack they are using.

Q. My attack method is always normal attack even when I swiped a card. How can I get a special attack method?

A. The Card Swiper of the D-Power Digivice will detect the speed of your swipe. Basically, a fast swipe will give you a SPEED ATTACK. A middle swipe will give you a SNIPER ATTACK and a slow swipe will give you a POWER ATTACK. Make sure that you swipe the card from top to bottom.

Q. What is D-Energy card swipe?

A. With D-ENERGY you can battle at double the normal power level. You may want to battle the more powerful Evil Digimon with your D-Energy points.

Q. I always lose the battle with the area boss Digimon. Please tell me how I can defeat him.

A. Follow the steps below for battle perfection

- Before reaching the area boss Digimon, train your Digimon with the Evil Digimon battles gaining more power with each victory.
- Switch with your Digi-Pals that you've met along the way
- Use Digi-Items for a special attack
- Use your D-ENERGY for a more poweful attack.

Q. How do I backup my D-Power data?

A. 1. Launch the D-Power program you installed in your PC .
2. Plug in the cable from your D-Power to your 9 pin serial port on your PC.
3. Select the INTERNET command on your D-Power and press the C button to ready it.
4. Press the UPLOAD button on your PC then press save button to save your Digimon.
5. You can store up to three games data in your PC's hard drive.

• It is recommended that you save your data on your PC frequently. The data in your D-Power Digivice will be lost if the batteries ever run out.

Q. What can I do if I receive an error message while connecting to my PC?

A. If your D-Power Digivice is not being recognized by your PC, try the following steps:

1. Turn your PC on and off.
2. Make sure the cables are securely plugged into the D-Power Digivice and 9 pin serial port of your PC.
3. Make sure the serial port is not being used by another application. (i.e. fax software) If it is in use, exit the application or restart Windows to free the serial port.
4. Select the INTERNET command on your D-Power Digivice and press the C button to ready it.

If your D-Power Digivice still is not recognized the D-Power program, then please contact Bandai's Customer Service at **(714)816-9560** or check at **www.bandai.com.**